

F300B_QSG

(Based on Generic QSG V3.2)

1. Material: 105 coated paper
2. Dimension: finished size 60*115mm, ±0.5mm.
3. Color & Surface finished: Pantone 661C, matte varnish finished.
4. Bindery: Accordion folding.

<div><div>JioPhone Guide</div><div>F300B</div><div>Reach us at Customer Care Number 1800 890 9999 Email us jiophonecare@jiophone.com Visit us www.jiophone.com</div></div>	<div><div>Safety guidelines</div><div>Please read these simple safety guidelines. Restricted area limitation Switch off your phone in restricted areas. Road safety Do not message/text or talk on your phone while driving. Use a hands free device. Battery use Use batteries, chargers, and other accessories provided by the manufacturer in the box pack. Authorised service personnel Only authorised service personnel should handle your phone. Avoid moisture Keep your phone dry. Hearing damage Do not listen at high volume levels for long period of time. SAR THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES. The JioPhone is designed not to exceed the limits for exposure to radio waves recommended by international guidelines.</div></div>	<div><div>Getting started</div><div>1 JioPhone.</div><div>Illustration for reference only.</div><div><div><div>Front Camera</div><div>Earpiece</div><div>3</div><div>4</div><div>5</div><div>6</div><div>8</div><div>7</div><div>2</div><div>9</div><div>10</div><div>11</div><div>12</div><div>13</div><div>14</div><div>15</div><div>16</div><div>Microphone</div></div><div><div>Headset Connector</div><div>Rear Camera</div><div>SD Card</div><div>SIM Card 2</div><div>SIM Card 1</div><div>Phone Charger</div></div></div></div>	<div><div>2 Know the keys</div><div><div>1 Directional Keypad (DPAD) keys</div><div>The navigation keys on DPAD (Left/Right/Top/Down) are used to move around the screen and the center key to select a particular item. DPAD Shortcuts from home screen Left key Short press it to launch Messages app. Right key Short press it to launch Camera app. Up key Short press it to open Quick settings which gives you easy access to frequently used features like Torch, Bluetooth, Wi-Fi, Calculator, Airplane Mode, Camera, Volume, Brightness, etc. Down key Short press it to launch Music app OR to reopen any other music app running in the background.</div><div>2 Voice assistant</div><div>From home screen long press the center key to launch Voice search using Voice assistant.</div><div>3 Left Side Key (LSK) / Payments key</div><div>In unlocked state, long press to launch/close payment option; short press to launch alerts/notifications.</div><div>4 Right Side Key (RSK) / Jio key</div><div>To show respective app related features & options / save; long press from home screen to launch My Jio app.</div><div>5 Voice/Video Call Key</div><div>In unlock state the Green call key, will trigger the call logs. While dialing number/selected contact, short press to make voice call and long press to make video call.</div></div></div>	<div><div>6 End call key / Power key</div><div>To end calls; long press to power ON/OFF the phone.</div><div>7 Back key</div><div>It will be always use to go to one level back from the current state.</div><div>8 Browser key</div><div>Short pressing of this key from home will launch browser application.</div><div>9 Lock / Unlock Key</div><div>Long pressing of this key will lock and unlock the phone.</div><div>10 SOS / Panic button call</div><div>Long press to initiate Emergency service number *112*.</div><div>11 Alt key input method</div><div>Allows you to type the Alternate character on a Key. Alt and Left Up Arrow key will turn on the NUM lock function.</div><div>12 Audio profile key</div><div>Long press from home screen to toggle between normal/vibrate audio profile mode.</div><div>13 Number Keypad</div><div>This part contains number from 0 to 9, After pressing up arrow key, user will be able to use the number keys.</div><div>14 Left Up Arrow</div><div>Press first this key to get the Upper Case form of a letter. Pressing Left Up Arrow and then Alt will turn on CAPS Lock.</div><div>15 Right Up Arrow / Language key</div><div>Press this key once to get the Upper Case form of a letter; long press to toggle between languages.</div><div>16 Space / Torch key</div><div>Long press of space key will Turn OFF/ON the Torch. Pressing twice in input field will give a full stop " . " symbol.</div></div>	<div><div>3 Status bar</div><div><div><div>Jio 4G</div><div>VoLTE</div><div>LTE</div><div>12:04 PM</div><div></div></div><div><div>Operator Name</div><div>Voice Network</div><div>Network kind & strength</div><div>Data traffic</div><div>Time</div><div>Battery Status</div></div><div><div>VoLTE</div><div>VoWiFi</div><div>No SIM</div><div>Battery charging</div><div>Battery full</div><div>Battery empty</div></div></div></div> <div><div>4 About the JioPhone</div><div><div>a) Insert Jio SIM card, battery and memory card. Important: This Phone is designed to be used with Jio SIM card only and comes with a pre-installed Jio SIM card.</div><div>Follow the next steps to replace it. Note Switch OFF your phone and disconnect the charger. 1 To remove back cover, gently pull it using the indentation at the back side of your phone. 2 Take the battery out. 3 Insert your Jio SIM card into SIM card slot. SIM Slot It is for Nano SIM card. 4 Insert a memory card into the SD card slot. SD Slot It is for External memory card. 5 To insert the battery, slide it into the compartment ensuring that the three terminals match the three contact points on your phone. 6 Reattach the back cover.</div></div></div>	<div><div>7 Power ON the JioPhone by long pressing the Power key until the Jio Logo appears.</div><div><div>b) Remove Jio SIM card, battery and memory card</div><div>Note Switch OFF your phone and disconnect the charger. 1 To remove back cover, gently pull it using the indentation at the back side of your phone. 2 Take the battery out. 3 Take your Jio SIM card out. 4 Take your memory card out.</div></div><div><div>c) Charge the battery</div><div>For the first time, fully charge the battery before switching ON the JioPhone. Remember to carry the following documents with you: Aadhar Card or Proofs of identity & address, Passport size colour photograph. After subscribing, insert Jio SIM in the SIM slot of the JioPhone. 2 Activate your Jio SIM After inserting the Jio SIM, switch on the JioPhone. Ensure the JioPhone is fully charged. Follow the steps to activate Jio SIM. To know more about Jio services, visit www.jio.com. 3 JioCare Customer Care Number 198 General Information Number 199 From other networks 1800 889 9999 Visit us www.jio.com Email us care@jio.com SMS keywords to 199 to receive information about the following: Tariff Plan (Postpaid) <MY PLAN> Bill (Postpaid) <BILL> Balance (Prepaid) <BAL> d) Lock or unlock your phone Use keypad lock to avoid pressing the keys by mistake. When the JioPhone keypad is unlocked, long press * button to lock the keypad. When the JioPhone keypad is locked, long press * button to unlock the keypad.</div></div></div>	<div><div>5 About your Jio SIM</div><div>Your Jio SIM empowers you with True 4G experience everywhere you go. You can make voice calls in HD, enjoy high speed Internet and get access to a secure mobile wallet, TV channels, movies, songs, news, and magazines and secure cloud storage, all on the JioPhone. 1 Subscribe to Jio services To subscribe to Jio services, visit the nearest Jio Store to purchase the JioPhone. Remember to carry the following documents with you: Aadhar Card or Proofs of identity & address, Passport size colour photograph. After subscribing, insert Jio SIM in the SIM slot of the JioPhone. 2 Activate your Jio SIM After inserting the Jio SIM, switch on the JioPhone. Ensure the JioPhone is fully charged. Follow the steps to activate Jio SIM. To know more about Jio services, visit www.jio.com. 3 JioCare Customer Care Number 198 General Information Number 199 From other networks 1800 889 9999 Visit us www.jio.com Email us care@jio.com SMS keywords to 199 to receive information about the following: Tariff Plan (Postpaid) <MY PLAN> Bill (Postpaid) <BILL> Balance (Prepaid) <BAL></div></div>	<div><div>If you have registered for a complaint, we will provide you a unique docket number. Your complaint will be resolved within the timelines as prescribed by TRAI. In case, you are unsatisfied with the response from JioCare, you can make a further appeal to the Appellate Authority in your region with your complaint docket number. The unique appeal number of your appeal will be communicated to you within 3 days of filing your appeal. The appeal will be decided within 39 days from the date of filing your appeal.</div><div><div>Appellate Authority</div><div>Reliance Jio Infocomm Ltd. Phone Number 1800-889-3999 Fax Number 1800-889-1211 For email and address details, please visit our website www.jio.com.</div><div>4 Terms and conditions Your usage will be rounded up to the next higher pulse for voice & data usage. As per TRAI regulations, the tariff is charged depending upon the duration of the call which is recorded to be within +/-1 second, traceable to an appropriate time reference. In case of non-usage (no voice or video calls, data, outgoing SMS, usage of Value Added Services or payment of rental for postpaid) for a continuous period of 90 days or more, the services to the mobile number will be deactivated at the discretion of Reliance Jio Infocomm Limited. Jio mobile number can be reactivated by making payment of ₹20 within 15 days of deactivation due to non-usage. Postpaid Postpaid customers can opt for the safe custody scheme in case of continued non-usage of a mobile number by paying ₹150 for every three months or part thereof.</div></div></div>	<div><div>Prepaid In case, the available balance in your account is more than ₹20 at the expiry of 90 days of non-usage period, ₹20 will be deducted from your account and the non-usage period will be extended by 30 days. This process will continue till the balance in your account is less than ₹20 post which your number will be deactivated.</div><div><div>As per DOT directions, national roaming is not permitted for J&K prepaid customers. Also, prepaid customers from other circles cannot roam in J&K. As per DOT directions, International roaming is not permitted for prepaid customers of Assam, North East and J&K.</div><div>JioPhone Features Let us learn about the amazing features of the JioPhone. Call supports True 4G VoLTE calls including popular options such as Speed dial, Recent, Contacts and Emergency call key. Messaging supports SMS and popular options. Internet supports 4G Data, supports browsing. Languages supports English and multiple Indian languages.</div></div></div>	<div><div>SPECIAL FEATURES AND APPS Connect to TV Watch your favourite movies and television shows on your TV from the JioPhone with the help of a JioMediaCable. This feature works on any TV set, be it CRT, LCD, or a Smart TV with JioMediaCable. Voice Assistant Give voice commands in English, Hindi or any other supported language to call, message, search, open the native phone functions like alarm, camera etc. Long press voice search key to start your personal Voice Assistant. Speak your command and get redirected to your chosen service. Try commands like Call 'Name', Message 'Name', Open Camera. JioPay Use JioPay App to make payments, book travel tickets and get exclusive offers anytime, anywhere. Use JioPay for all your everyday payments, recharges, bookings and avail exclusive offers. Long press LSK key to launch JioPay from home screen. MyJio Provides easy access to MyJio. Manage your Jio account - balance, recharge, usage etc. JioStore Download and enjoy many more Apps on the JioPhone.</div></div>
--	---	---	--	---	---	---	--	---	--	---

Front

Navi
C 100 M 95 Y 5 K 0
Pantone 661 C

Open
720mm x 115mm

Folded
60mm x 115mm

<div>Basic Functions</div> <div>1 CALL & MESSAGING</div> <div>Make / End a call</div> <div>Save a contact</div> <div>Write, send and receive messages</div>	<div>3 Type in the number or add from Contacts using RSK.</div> <div>Note</div> <div>Receive Messages</div> <div>Option 1</div> <div>Option 2</div> <div>2 CAMERA</div> <div>Access Camera</div>	<div>Take a photo</div> <div>Note</div> <div>View Photos</div> <div>Record a video</div> <div>3 ENTERTAINMENT</div> <div>Listen to music</div>	<div>Play FM radio</div> <div>Note</div> <div>Play a video</div> <div>4 CLOCK & CALENDAR</div> <div>Set an alarm</div> <div>Add a calendar event</div>	<div>2 Use DPAD up/down/left/right keys to select the date of event.</div> <div>3 Press the LSK key to add an event.</div> <div>5 PHONE SETTINGS</div> <div>Access Settings</div> <div>Change the time and date</div> <div>Set the ringtone</div> <div>Change the wallpaper</div>	<div>screen from Camera or Wallpaper or Gallery.</div> <div>Set Language</div> <div>Change the volume</div> <div>Set the ringtone</div> <div>Update your device software</div>	<div>Device Information.</div> <div>Factory reset</div> <div>Model number and serial number (IMEI)</div> <div>Model</div> <div>6 BROWSER</div> <div>Browse the web</div>	<div>Basic Functions</div> <div>Phone care</div> <div>Children</div> <div>Hearing Safety</div> <div>Return & Recycle</div>	<div>c) Do not store your device near or in heaters, microwaves, cooking equipment, or high pressure containers.</div> <div>Certification information (SAR)</div> <div>Precautions</div> <div>THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.</div> <div>The guidelines were developed by an Independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.</div> <div>TRADEMARKS</div>	<div>Tariff</div> <div>For Postpaid customers, Tariff is as per the Tariff Enrolment Form (TEF) that you have filled and signed at the time of subscription.</div> <div>Base Tariff for prepaid customers:</div> <div>Your Jio Prepaid Plan</div> <div>Voice</div> <div>Data</div> <div>SMS</div> <div>Jio Apps</div> <div>Validity</div> <div>You can choose from a wide variety of plans that provide "All Unlimited". For more details, visit www.jio.com.</div>
---	--	--	--	---	--	--	--	---	--

Back



Navi
C 100 M 95 Y 5 K 0
Pantone 661 C

Open

720mm x 115mm

Folded

60mm x 115mm